



AirGrid antenna.
Follow manufacturer's instructions
and set up for VERTICAL polarity.

**Connecting to the DSR
network - Basic setup
using AirGrid with wired
connection to computer.**

Connect to LAN or NETWORK port
(RJ-45 connector) on computer.

CAT-5E network cable - length
determined by your installation.
Use outdoor rated cable (CMX -UV)
for permanent installations.

AirGrid antenna is outdoors.
POE adaptor and power supply are
indoors.

POE (Power over Ethernet) adaptor. Connect
jack end to cable from AirGrid. Connect plug
end to computer.

12 - 18 V DC to POE adaptor. Make sure
that center pin is positive (+).
NEVER exceed AirGrid maximum rating
of 24V! Install in-line fuse - 3 Amp.

